

STEPPERONLINE®

BLDC DRIVER CONTROL PANEL

DBLC-01 v3.01



#7 Zhongke Road, Jiangning, Nanjing, China

T: 0086-2587156578

Web site: www.omc-stepperonline.com

E-Mail: sales@stepperonline.com

Function of control box


1. Display speed. It can display the real time rotation speed of the motor.
2. Start/Stop button on the panel to control the start/stop of the motor.
3. The forward and reverse keys on the panel can control the forward and reverse running mode of the motor.
4. The speed adjustment potentiometer on the panel allows stepless adjustment of the different speeds of the motor.

Terminal interface description

- 1 GND: signal ground
- 2 F / R: switch the direction of motor operation
- 3 EN: control of motor start/stop
- 4 BK: control of electrical braking of motors
- 5 SV: analogue 0-5vdc input to control motor speed from 0 to set speed.
- 6 PG: signal input for motor speed, display of rotation speed
- 7 ALM: input signal for alarms. ERR is displayed when an alarm is raised
- 8 + 5V: speed regulation of voltage, potentiometer continuously adjustable at SV and GND

Mechanical installation:

The opening size is 50*80mm, the distance between the mounting holes is 90mm, and the length of the lead wire is 500mm.

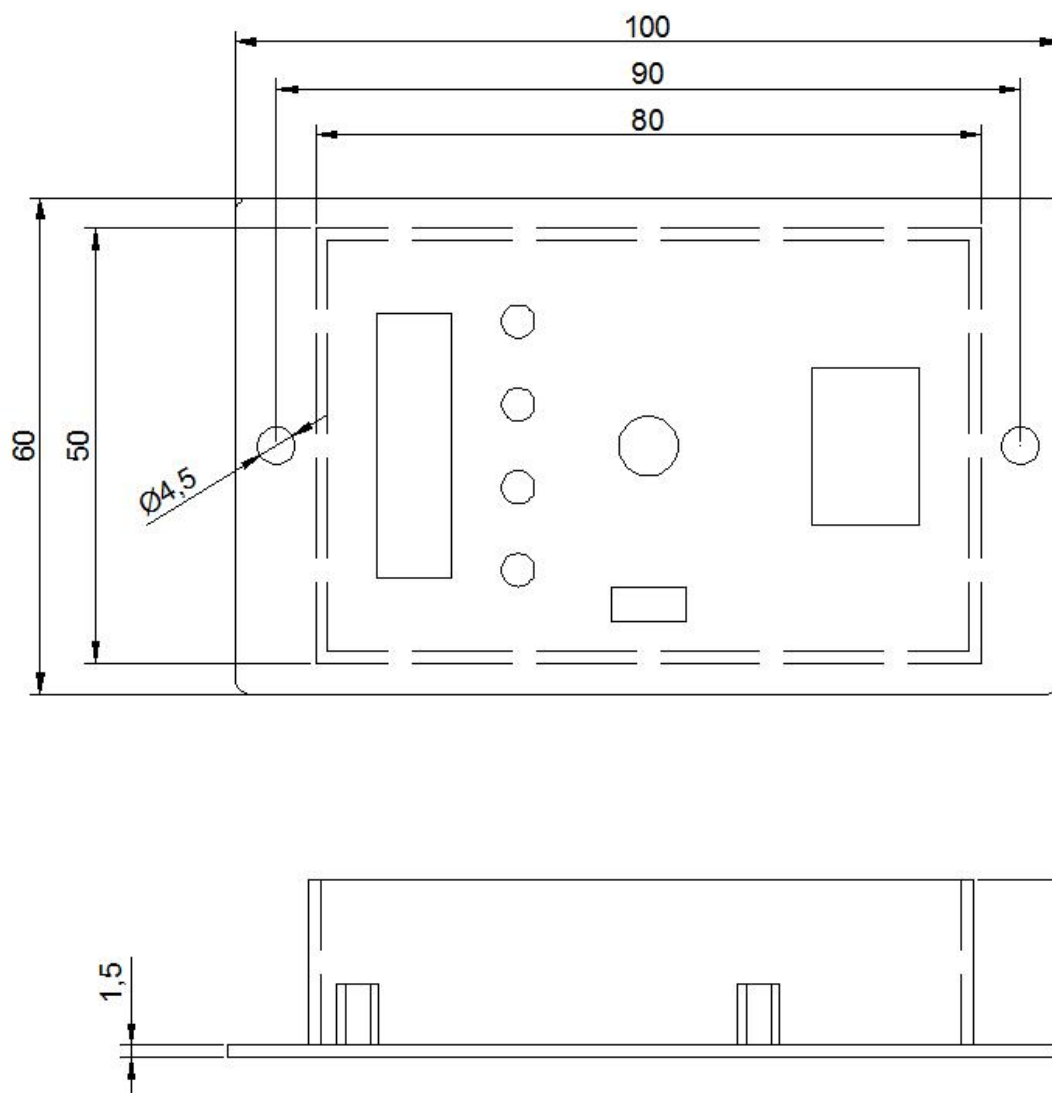

Definition of modifying display board parameters:

P000 00 Invalid value

P001 02 Number of motor poles (Modify according to the actual number of pole pairs of the motor, otherwise the display will not be correct)

P002 of Multiplication of speed pulse signals

P003 10 Display of the fine adjustment of the speed (not recommended for modification)

P004 40 Parameter (not recommended for modification)

P014 C8 Display of the fine adjustment of the speed (not recommended for modification)

P015 07 Parameter (not recommended for modification)

There are 4 keys below the digital tube.

The first button is the return button, the second is the increase button, the third is the decrease button and the fourth is the parameter entry button.

Physical view of the control box:

